


AUTOPURGE FEATURES

- | Patented, calibrated orifice custom tunes to each individual riser based on its total capacity (gallons), minimizing runtime of N₂Blast
- | Purges FPS piping to ensure entire system is blanketed with 98%+ nitrogen purity
- | Mounts horizontally on a section of the FPS piping
- | Locate APS at a remote, accessible location on FPS, in an area where water will not collect
- | No electrical required
- | One AutoPurge is required per dry or pre-action system

UNIT DETAILS

AutoPurge	
Part Number	
AutoPurge 2	A03-APS2
AutoPurge 4	A03-APS4
Dimensions	
A (Width)	10.39"
B (Width)	1.50"
C (Height)	5.36"
Warranty	One Year ¹

1. Per Manufacturer's Terms & Conditions.

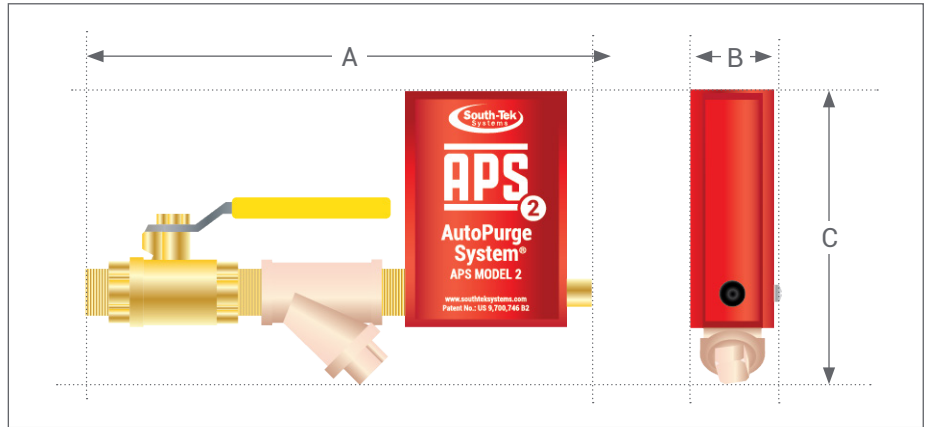

SAMPLING PORT FEATURES

- | Provides additional location to check nitrogen purity concentration within sprinkler piping
- | Offers peace of mind that nitrogen is fully blanketed throughout FPS
- | One or multiple Sampling Ports can be installed on any zone which already has an AutoPurge System
- | Mount horizontally on a section of FPS piping
- | No electric required
- | Optional for additional purity check locations

UNIT DETAILS

Sampling Port	
Part Number	
Sampling Port	A02-QCSP
Dimensions	
A (Length)	7.30"
B (Width)	1.43"
C (Height)	2.38"
Weight	lbs.
Warranty	One Year ¹

1. Per Manufacturer's Terms & Conditions.

