


## FEATURES

### N<sub>2</sub>INERT System

- | Reduces oxygen levels within any wet FPS
- | Effectively displaces all trapped air within a wet system with pure nitrogen
- | Includes injection port to connect nitrogen supply and exhaust port
- | Exhaust port provides connection w/ Quick-Check® - Portable Purity Sensor
- | Requires nitrogen supply

### High Pressure Regulator Kit

- | Connection point for nitrogen source
- | For use with high pressure nitrogen cylinder or liquid nitrogen dewar
- | Includes 10' hose with quick connect nipple

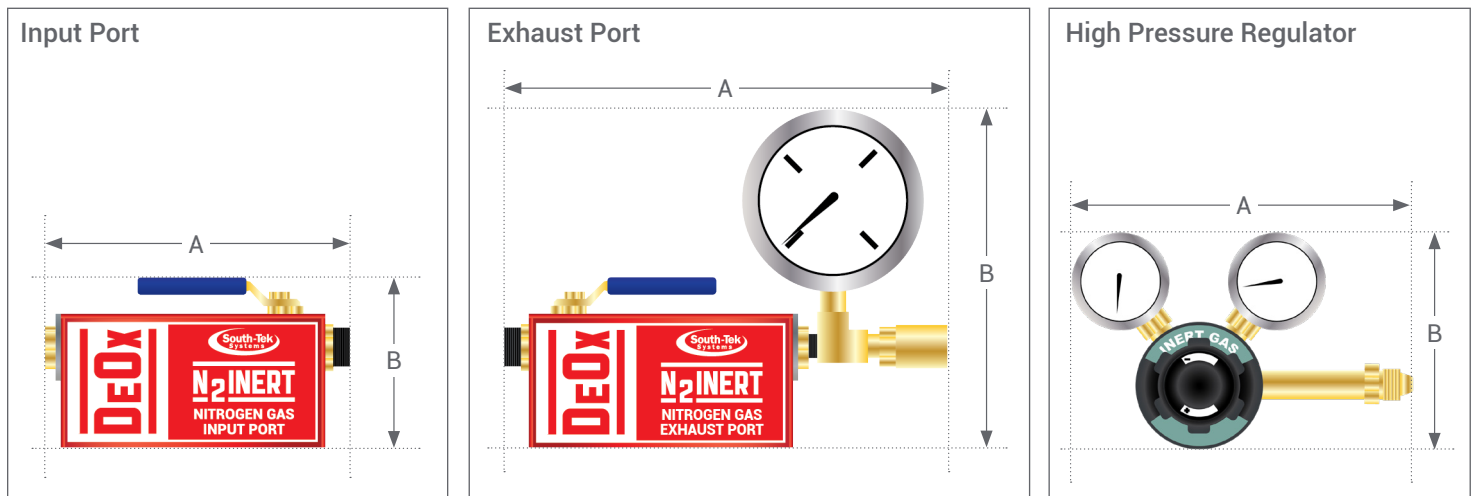

## UNIT DETAILS

	Input Port	Exhaust Port	High Pressure Regulator
<b>Part Number</b>			
	AS0-100		B08-A-000
<b>Dimensions</b>			
A (Width)	8.92"	10.25"	5.7"
B (Height)	3.8"	7.5625"	7.3"
C (Depth)	3.0"	3.0"	7.2"
Weight	2.1 lbs.	2.3 lbs.	3.05 lbs.
<b>Unit Details</b>			
Electrical	No electrical required		
Warranty	One Year <sup>1</sup>		

1. Per Manufacturer's Terms & Conditions.

## OPTIONAL EQUIPMENT

Part Number	Product Description
A50-300-DeOx	Quick-Check portable N <sub>2</sub> Sensor with quick connect nipple