

### FEATURES

*South-Tek's AutoPurge Timer eliminates the continuous venting of the AutoPurge System/s by closing the purge after 98%+ nitrogen (i.e. the desired purity level to inhibit corrosion) has had sufficient time to cycle throughout the FPS.*


- | Purge automatically turns to the "closed" position after 5 weeks (field adjustable)
- | Manual reset to resume purging when the FPS is tested or trips

#### 1 Zone Timer

- | Connects to (1) N<sub>2</sub>Blast - AutoPurge System
- | To be wall mounted within 15' of the AutoPurge System
- | Provided with 15' of ¼" plenum rated tubing

#### 6 Zone Timer

- | Connects to up to (6) N<sub>2</sub>Blast - AutoPurge System
- | Wall mountable at a central location within the building
- | Provided with 500' of 1/4" plenum rated tubing

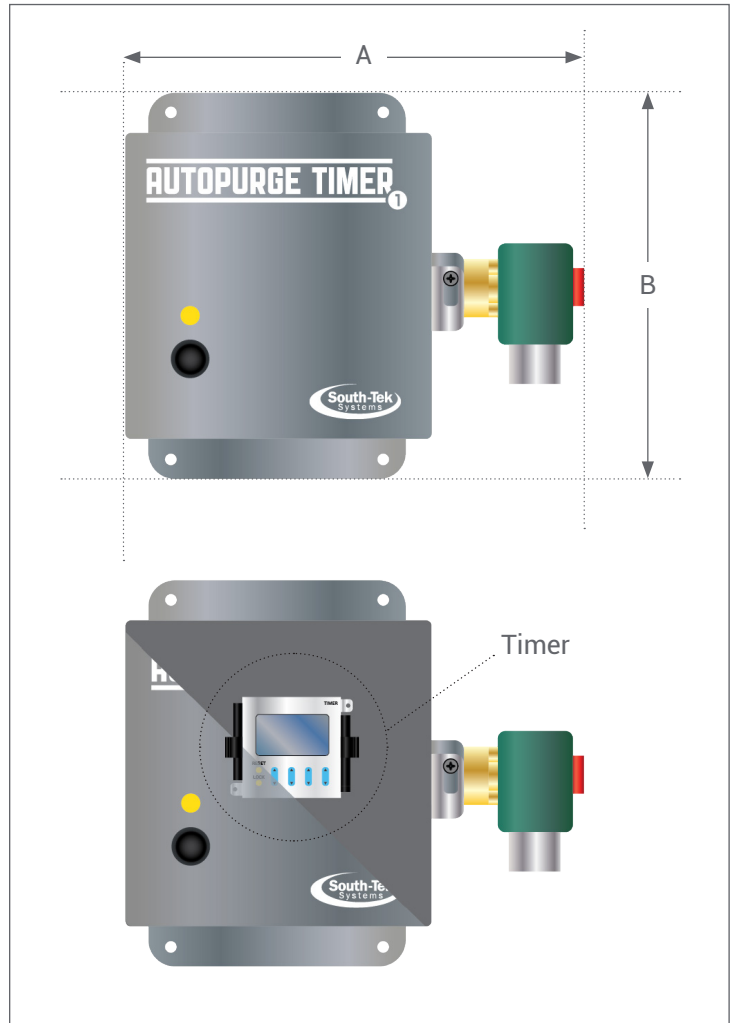

### UNIT DETAILS

	AutoPurge Timer - 1 Zone	AutoPurge Timer - 6 Zone
Part Number		
	A02-QCF-PST	A02-QCF-6PST
Dimensions		
A (Width)	6.3"	6.3"
B (Height)	6.3"	6.3"
C (Depth)	4.37"	4.37"
Weight	7 lbs.	8 lbs.
Unit Details		
Electrical	110V / 60Hz / 1Ph, 1.5 AMP	
Warranty	One Year <sup>1</sup>	

<sup>1</sup>. Per Manufacturer's Terms & Conditions.